

SERVICE BULLETIN

Date: 27 January 1999

Adjustment of click clutch in film processor

Recently many have been asking: "How do we adjust the click clutch correctly?"

The answer is as follows:

A) The four screws marked "A" are loosened in order to turn part "B" (Fig. 1.). This way distance "C" appears.

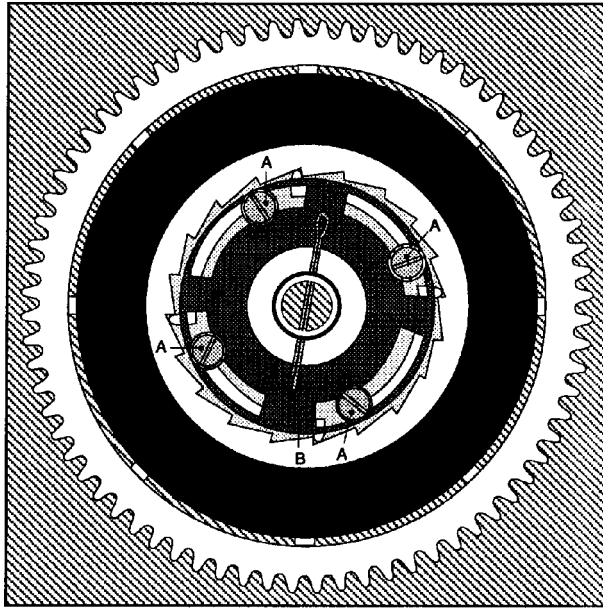


Fig. 1.

B) The distance "C" is adjusted as follows: **Dev/Fix/Wash rack $10,5 \pm 0,5\text{mm}$ (Fig. 2.)**
Dryer rack $8,5 \pm 0,5\text{mm}$

C) The screws are tightened again.

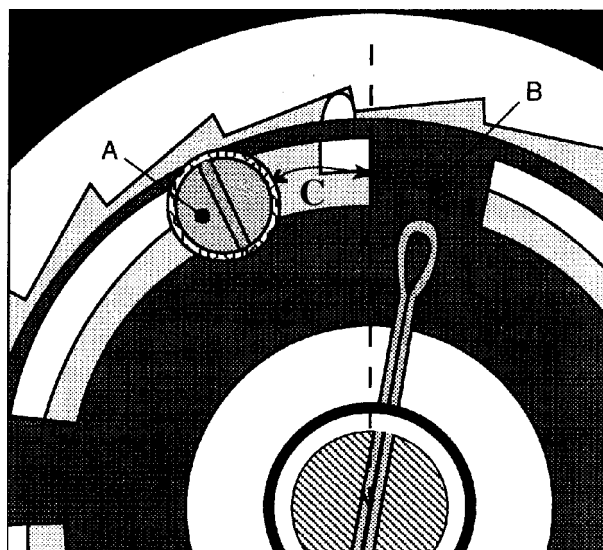


Fig. 2.