


INSTALLATION GUIDE FOR :
Fix Spray Bar Kit 36"
Part no:136315

Before starting the installation make sure that the whole kit is there.


Quantity	Part description	Part number
1pc	Fix spray w.guide compl.36"	136319
1pc	Flow reducer,fix spray	234254
1pc	T-piece for fix spray 28L	234294
3pc	Hose Clamps 3/4"	65208
2pc	Hose clamp type D	65050
1pc	Screw PHRX 4x6 A4 din 7985	88021
4pc	Screw set Mg 4x10 A4 din 933	88102
4pc	Spring Washer 4mm a4 din 127b	888201
1pc	Lock Disc 4,3mm a4 din 6798	88245
4pc	Screw set 4Mgx12 a4 din 933	88504
1pc	Flow control clamp ø14mm.red	912061
1pc	Flow cut off clamp ø10-19 White	912065
200cm	Tube ø 8x12 silicone	912107

Installation :

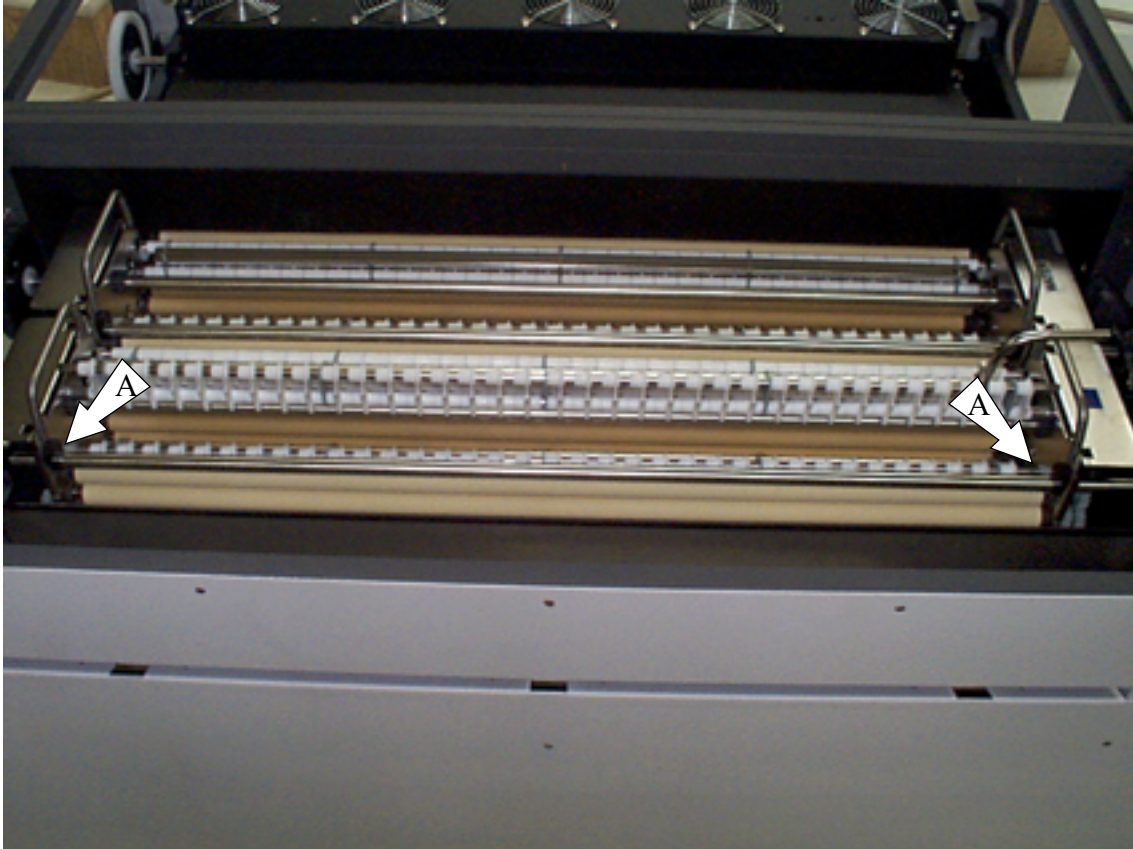


A/ Demount the existing inlet guide in the fix rack (One screw in each side)

B/ It might be necessary to lift the entire rack out of the machine.

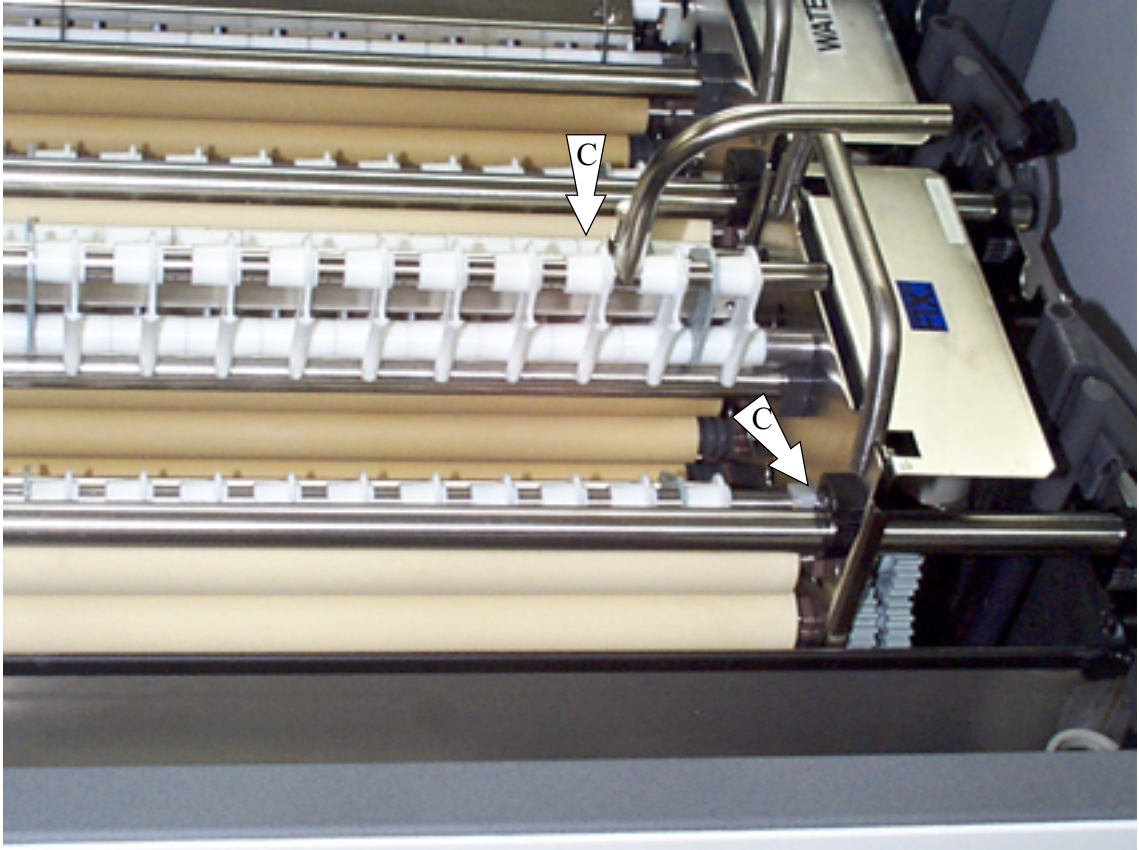


C/ Mount the new crossover inlet guide with fix spray in the same position as the old one.

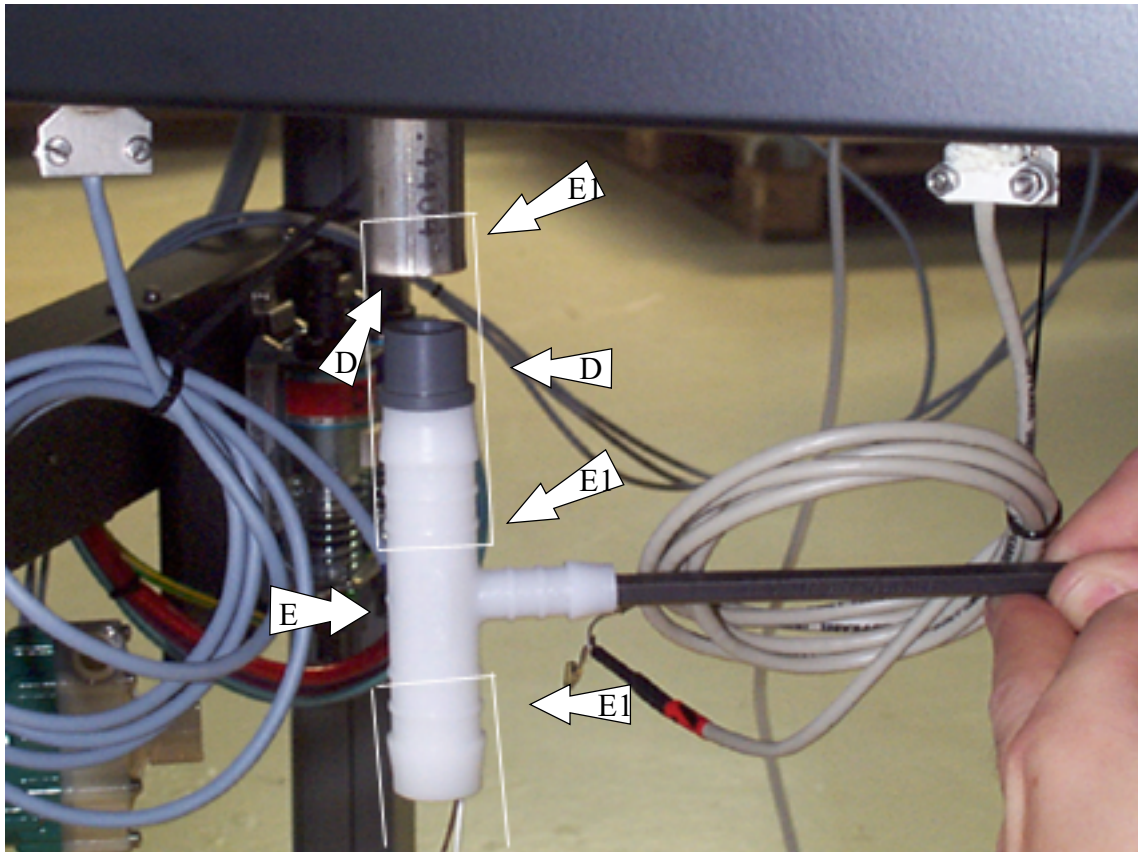

D/ The grey flow reduction stub must be mounted inside the metal inlet stub of the fix tank.

E/ The white T piece connector must be mounted together with the grey stub with a piece of the existing hose from the fix pump.

E1/ Mount with 3/4" hose clamp

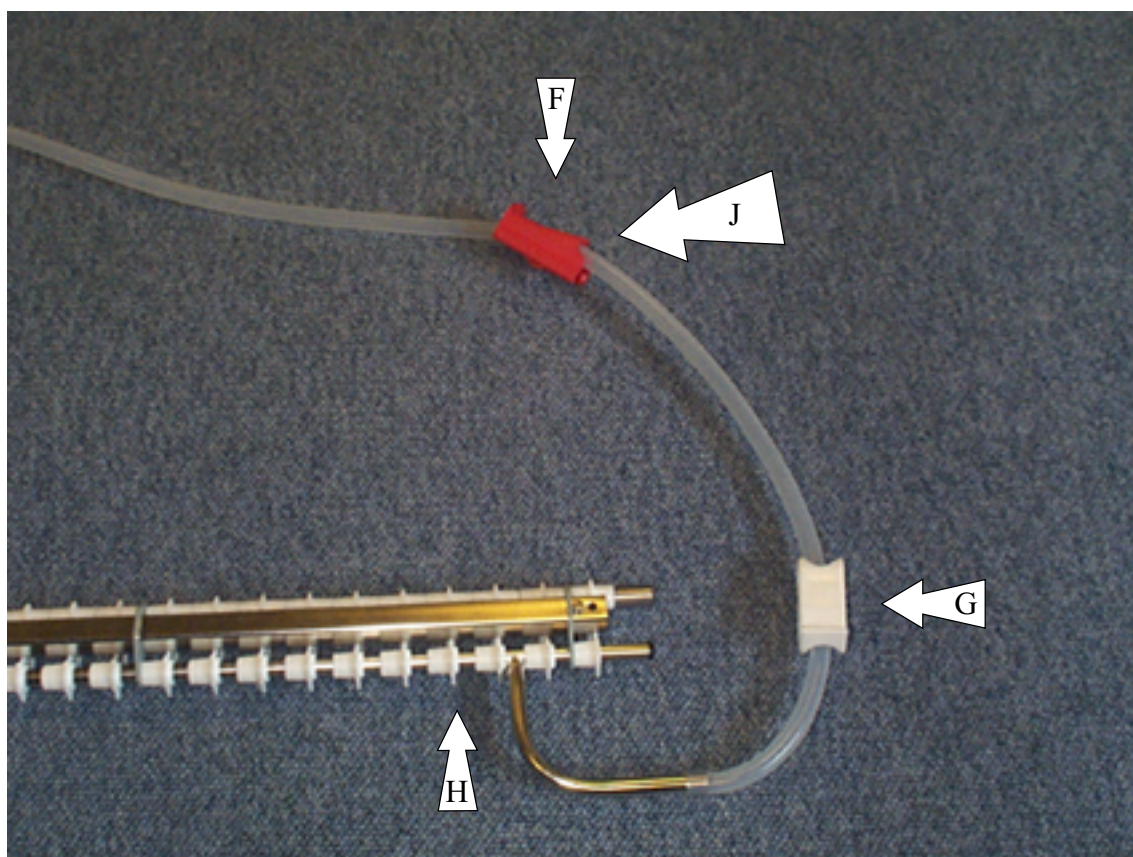

F/ Mount the red reduction valve clamp on the silicone hose. As shown on the picture.

G/ Mount the white cut off valve Clamp on the silicone hose. As shown on the picture.

H/ Mount the silicone hose on the Fix spray bar. (Optional secure with one plast hose clamp)

I/ Mount the other end of the hose to the white T piece. And Secure with one plast hose clamp.

J/ PLEASE NOTE !! When the machine is started for the first time, the red reduction valve must be completely closed to prevent that high pressure will spray fixer into the developer bath. When the machine is running, gently open the valve, until there is regular fix spray to the top roller, in the fix rack.