

SERVICE BULLETIN

Date: 8 April 2005


No. 34

Easier Cleaning of Unitrack Racks in EG 751 and EG 901

Echo Graphic is pleased to introduce better access for cleaning of rollers in unitrack racks for EG 751 and EG 901 processors for the printed circuit board industry.


By removing one roller and the topguide assembly, you will now gain access to clean all rollers with sponge or soft brush.

Please refer to the drawing below to see which roller is made removable.

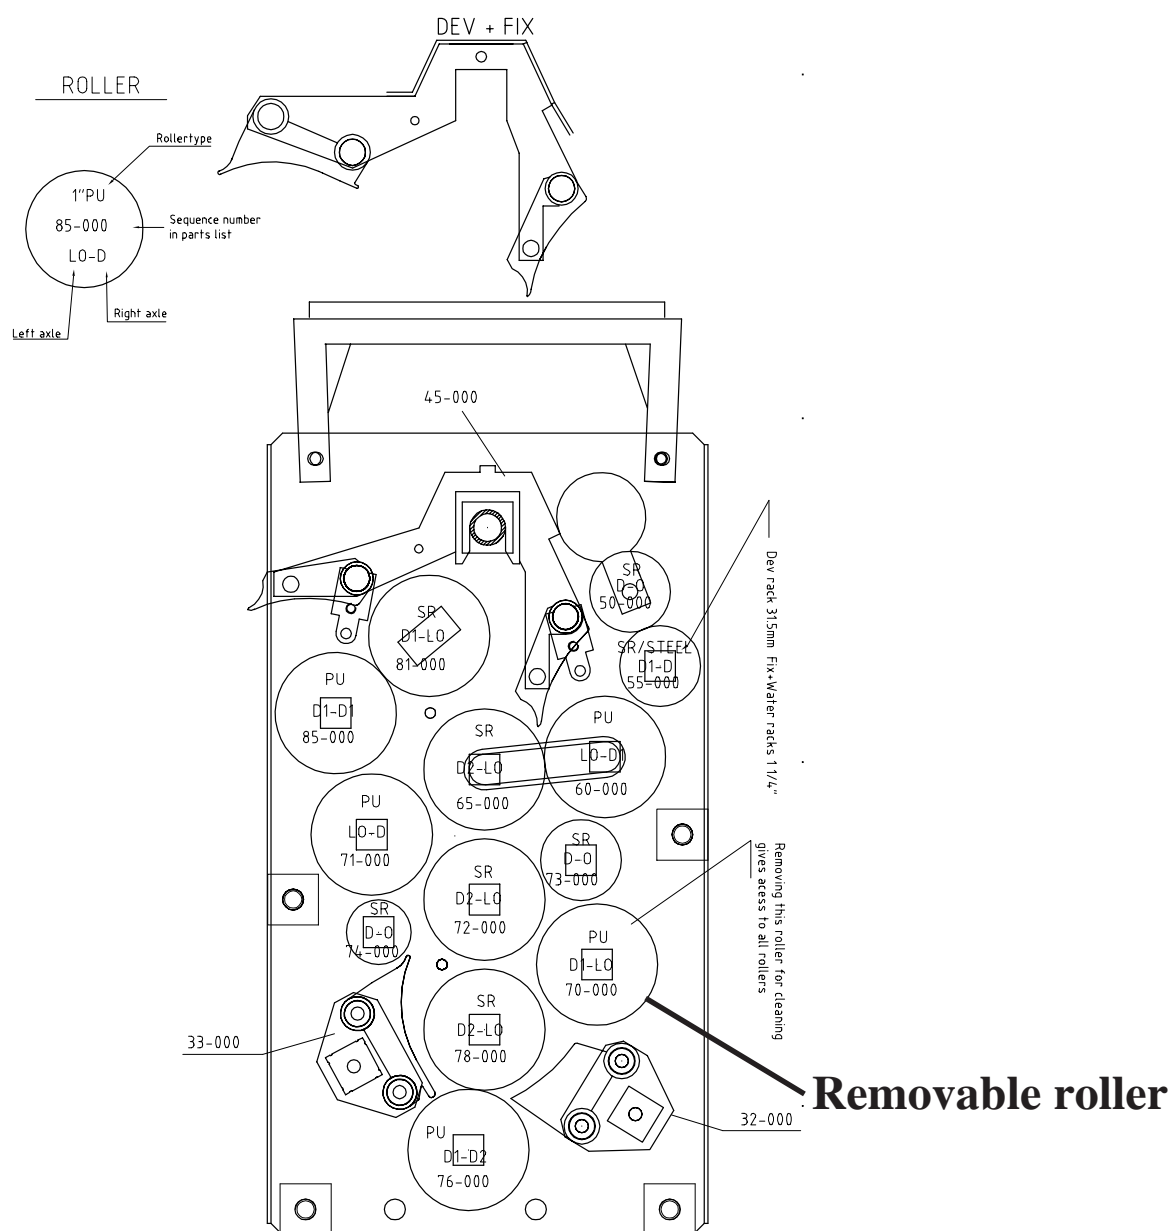

Procedure for removing roller

Remove cotter pins from axle at both ends, remove also the gearwheel at the right end.

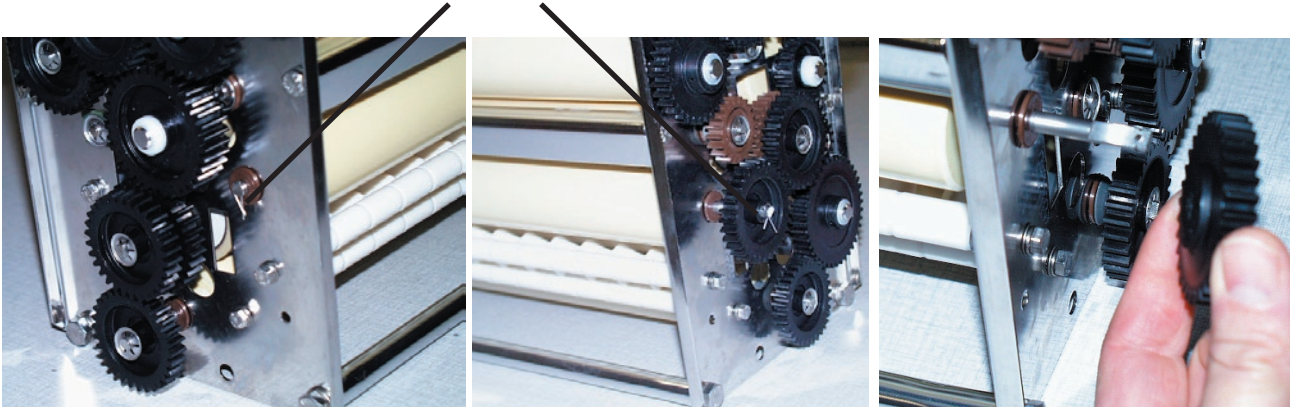

Push the roller to the right, now the roller can be lifted out.

Remove the top guide assembly.

Now all rollers in the rack can be accessed for cleaning with a soft sponge or brush.



Refitting goes in the reverse order.