

INSTRUCTIONS

1. Turn off the processor and remove the wall plug.
2. Remove the front cover placed in front of the main board on the side plate. See fig. 1.
3. Mount the sensor(s) (see fig. 2). There must be an inlet and outlet sensor on the same side, right or left, both in the middle. Ex for Dolev 800:
 - one inlet + outlet sensor right
 - one inlet + outlet sensor left
4. Mount the sensors on the main PCB. See fig. 5 on the next page.
5. Turn on the processor and revert to the service menu. See page 2 for information about how to gain access to the service menu. Revert to SEN-SOR.
6. Use the left and right arrows until the reed sensor 4 or 6 (film output sensors) appears. See fig. 3. Use +/- to select »Reed switch, NO« (software version 2.11) or »Reed switch, NC (software version 2.12). See fig. 4.
7. Exit the service menu and test the system. If the sensor stops the process before the film has activated the output sensor, the processor may be configured incorrectly (ex. too short rack lengths). To solve the problem you may have to update the software. See page 5-57 in the service manual.

When upgrading your software you must repeat the installation of the outlet sensors.

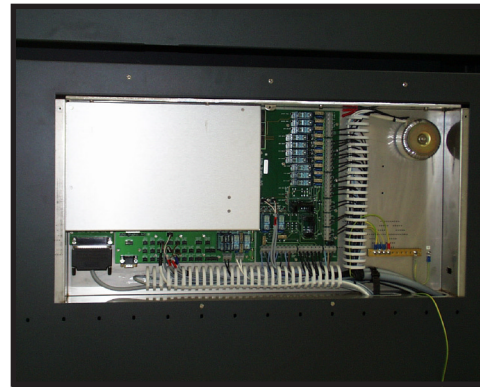


Fig. 1 The main board

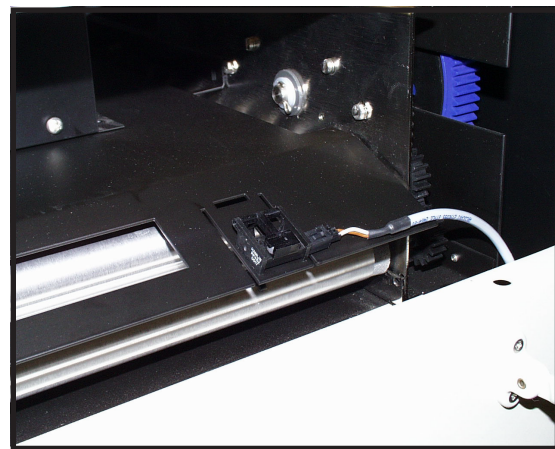


Fig. 2 Outlet sensor(s) placed on the left side

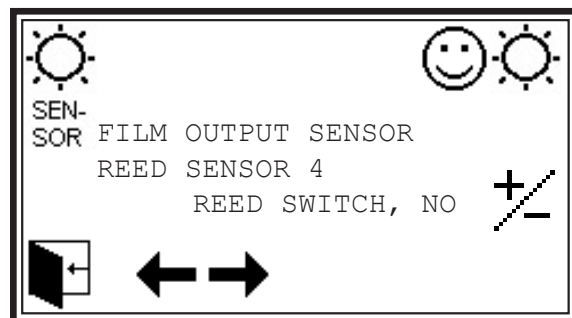


Fig 3. Configuration activated on SW 2.11

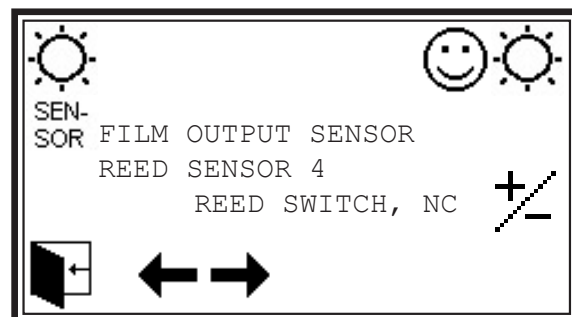


Fig 4. Configuration activated from SW 2.12

Installation of Outlet Sensors

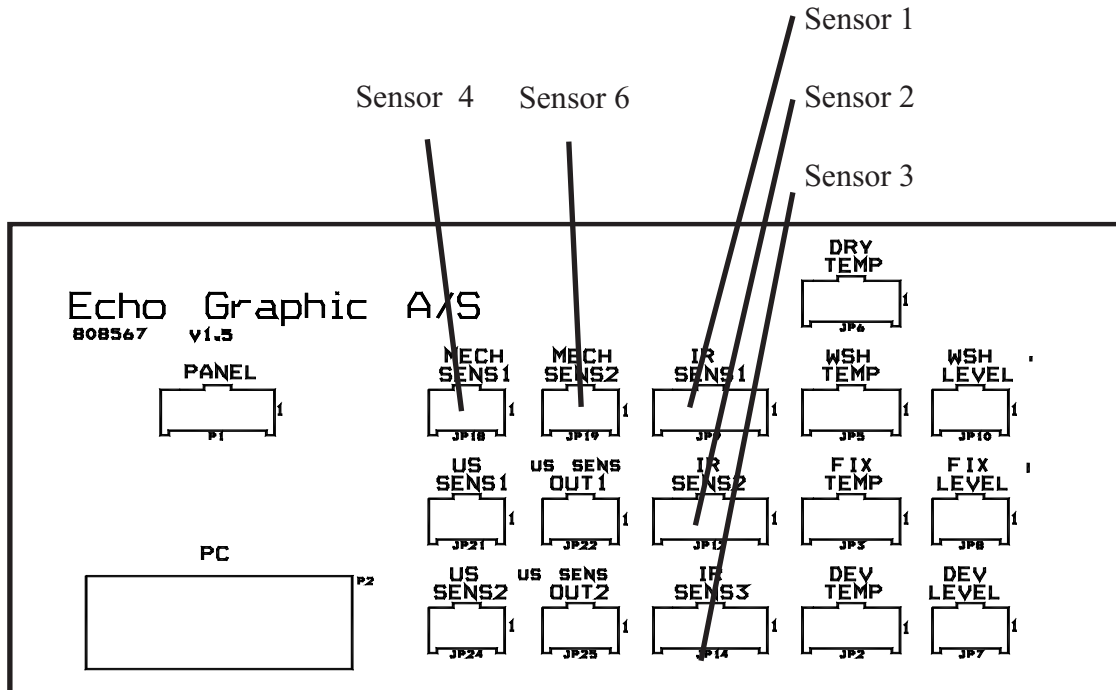


Fig. 5 Mounting of sensors


* Sensor 5 is not available
US sensor is not available

Accessing the Configuration Utility


Access to the Service Menu

Switch off and on the processor and press **S** when the processor is in stand-by mode.


The service menu appears:

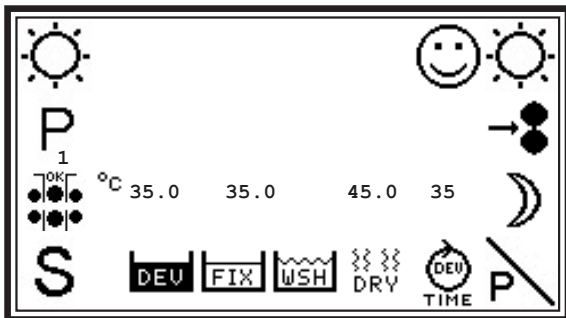

Stand-by mode

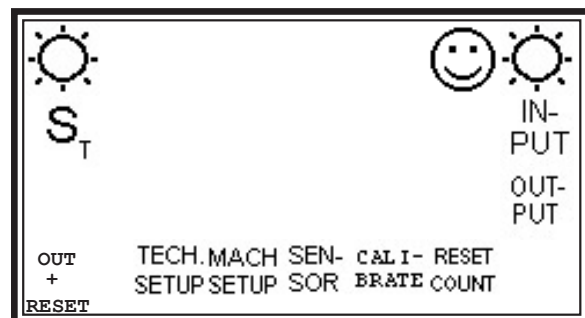

Service menu

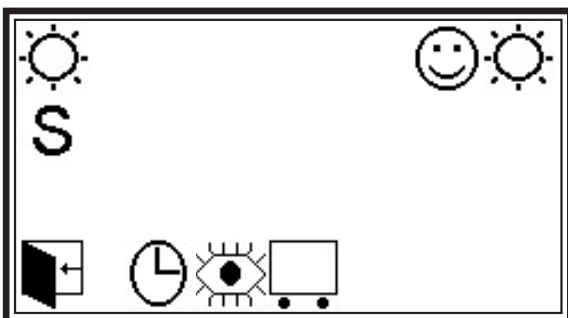

When the setup menu appears press the three right buttons in the following order: Top, middle and bottom.